 
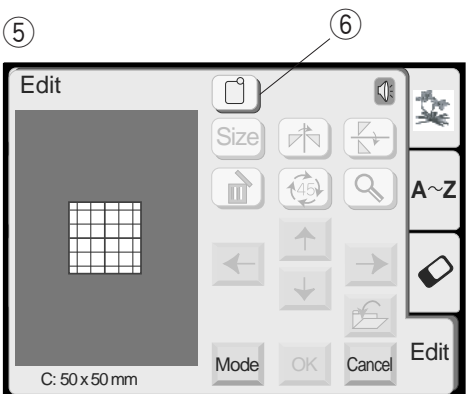 
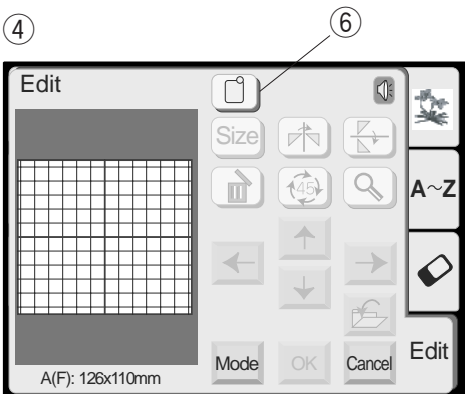 
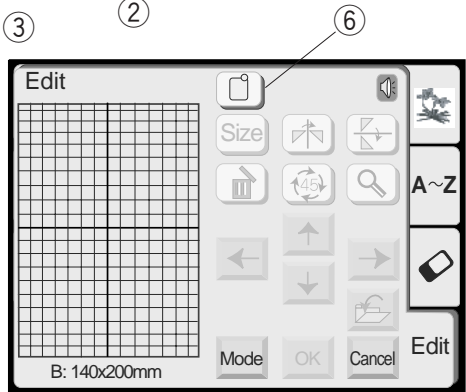 
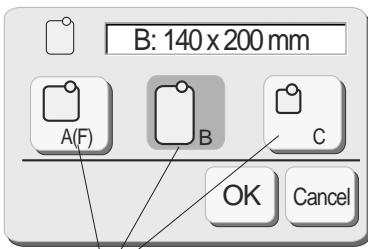 


# For Memory Craft 300E Users

The latest program updating allows a use of the **Free-arm hoop C** (optional item).

Please insert this slip into page 37 of your instruction book.

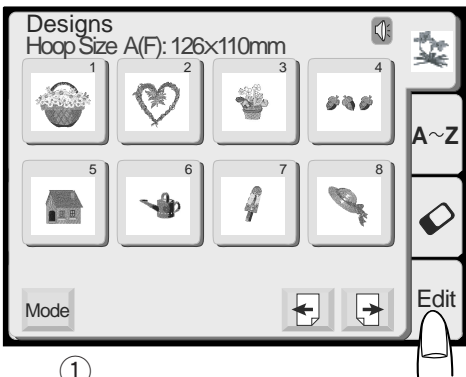

## Editing Mode

The editing function allows you to modify and combine embroidery patterns to create your own original designs.

### Editing screen

Press the Edit key to open the editing screen.

The hoop selection window opens to allow you to select the hoop you wish to use.

- ① Hoop Selection Window

### Selecting the hoop size

You can select one of the following hoops by pressing the hoop selection key.

**Standard Hoop A:** 126 mm by 110 mm

**Round Hoop F:** 126 mm by 110 mm (Optional item)

**Large Hoop B:** 140 mm by 200 mm

**Free-arm Hoop C:** 50 mm by 50 mm (Optional item)


- ② Hoop Selection Keys

Press the **OK** key and the editing screen for the selected hoop will open.

- ③ Editing Screen for the Hoop B
- ④ Editing Screen for the Hoop A (F)
- ⑤ Editing Screen for the Hoop C

Press the **Cancel** key to return to the default setting (Hoop B).

 
### NOTE:

To change the hoop size, press the  key ⑥ and select the desired hoop.


# For Memory Craft 9500 Users

The latest program updating allows a use of the **Free-arm hoop C** (optional item).

Please insert this slip to page 91 of your instruction book.

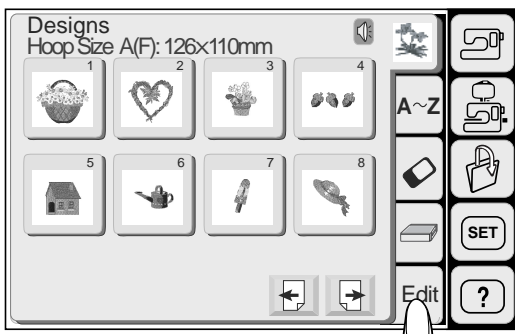


①

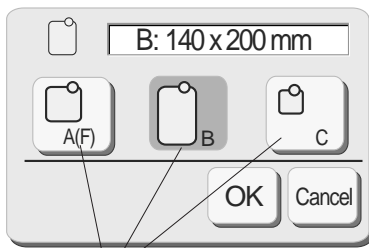 


②

 
③

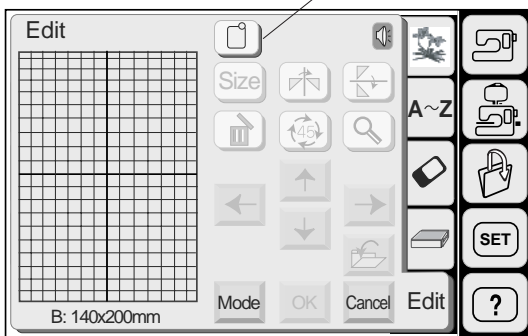

④

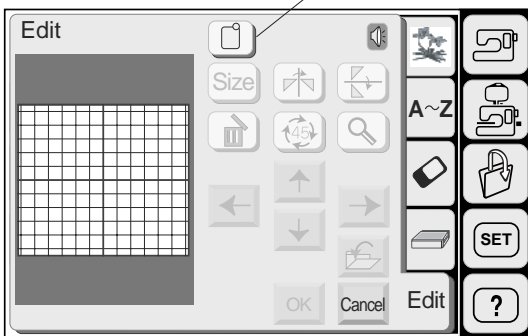 

⑤

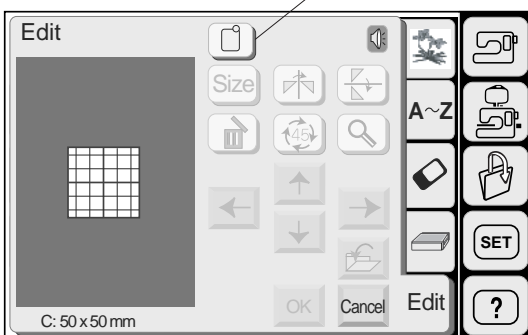 

## Editing Mode

The editing function allows you to modify and combine embroidery patterns to create your own original designs.

### Editing screen

Press the Edit key to open the editing screen.

The hoop selection window opens to allow you to select the hoop you wish to use.

① Hoop Selection Window

### Selecting the hoop size

You can select one of the following hoops by pressing the hoop selection key.

**Standard Hoop A:** 126 mm by 110 mm

**Round Hoop F:** 126 mm by 110 mm (Optional item)

**Large Hoop B:** 140 mm by 200 mm

**Free-arm Hoop C:** 50 mm by 50 mm (Optional item)

② Hoop Selection Keys

Press the **OK** key and the editing screen for the selected hoop will open.


③ Editing Screen for the Hoop B

④ Editing Screen for the Hoop A (F)

⑤ Editing Screen for the Hoop C

Press the **Cancel** key to return to the default setting (Hoop B).

### NOTE:

To change the hoop size, press the  key ⑥ and select the desired hoop.