# volca sample DIGITAL SAMPLE SEQUENCER

## **Factory Sample Restoration Instructions**

Do not playback the sample restore file on any speaker or headphone system as this could lead to damage to equipment and/or hearing loss. Korg or any of its affiliates will not accept responsibility for any damages, personal loss or injury that may result from playback of the file.

### What you will need

You will need the following to perform restoration.

- An audio player or personal computer capable of audio playback
- A stereo mini-jack audio cable
- AC adapter KA-350 or six AA batteries



Make sure the batteries are brand new if using alkaline or fully charged if using NiMH batteries.


#### **Preparations**

Unzip the file "volcasample\_factory\_sample\_e.zip".
 If using an audio player, transfer the file volcasample\_factory\_sample.wav from your computer to your audio player.




Do not playback the way file on any speaker or headphone system as this could lead to damage to equipment and/or hearing loss.

2. Connect the audio output of your playback device to the SYNC IN connector on your volca sample.

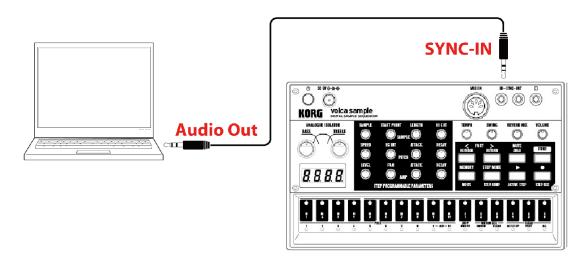


#### Perform the restoration

- Turn the power on.
   The display should read "LIVE".
- Start the playback of volcasample\_factory\_sample.wav to begin. The display will read "dAtA" and "ALL" alternately.

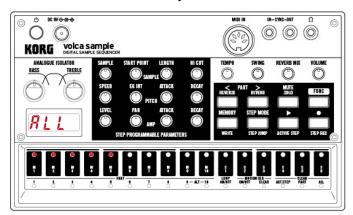

- Make sure the volume of the playback device has been turned up.
- note STEP LEDs 1-16 will indicate the restoration progress.
- Make sure the wav file is played from the beginning.
- When using a computer, any other system sounds (e.g. email notification) will cause the restoration to fail. Make sure all other applications are shut down and do not operate you computer during restoration.
- The restoration will take approximately 13 minutes. Do not turn your volca sample off or stop playback while restoration is in progress.
- If the restoration fails, the knobs will start blinking. If this happens, observe "Tips" at the end of this document and repeat the restoration from step 1.
- 3. When restoration has been successfully completed, "End" will be displayed. Press FUNC to return to normal mode. Sample restoration is complete.

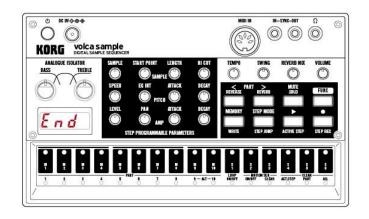

#### **Tips**

- Restoration may fail with some audio players, computers or software. If this is the case, please try
  with a different device.
- If you are having trouble with the restoration, please check the following:
  - Make sure the volume of the playback device has been turned up.
     Please note that some devices which have very high output levels may fail because of it. If this is the case please try turning the volume down and start the restoration process again.
  - Make sure all functions that affect the playback sound, such as cross-fade and EQ, are disabled.
  - Make sure the wav file is played from the beginning.
  - Check the connection from your playback device to your volca sample.
  - When using a computer, any other system sounds (e.g. email notification) will cause restoration to fail. Make sure all other applications are shut down and do not operate you computer during the restoration.